

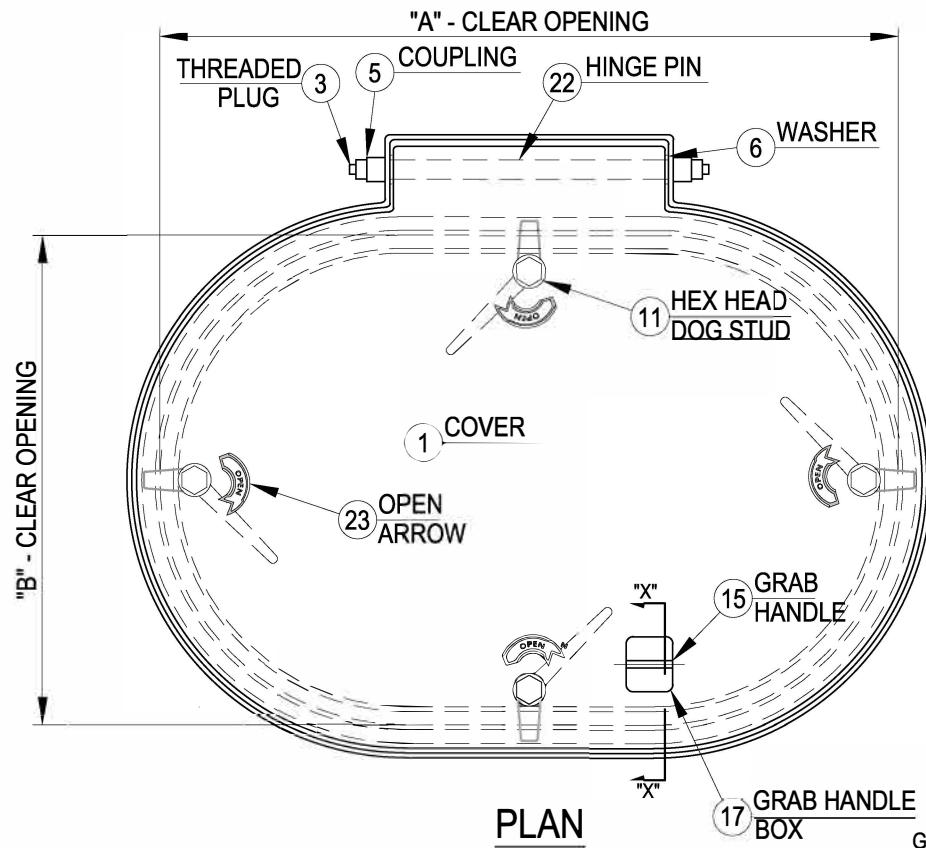


## SCHEDULE OF MATERIALS

PC.	MATERIAL	REMARKS
1	MILD STEEL	
2	MILD STEEL	3/8" THK x 4" TALL
3	MILD STEEL	
4	MILD STEEL	
5	MILD STEEL	
6	STAINLESS	
7	NEOPRENE	
8	MILD STEEL	
9	FORGED STEEL	
10	STAINLESS	
11	BRASS	
12	STAINLESS	
13	DELTRIN	
14	MANGANESE BRONZE	
15	MILD STEEL	
16	TEFLON	
17	MILD STEEL	
18	MILD STEEL	
19	PLATED	
20	MILD STEEL	
21	MILD STEEL	
22	COLD FINISH	
23	STAINLESS	316L ALLOY

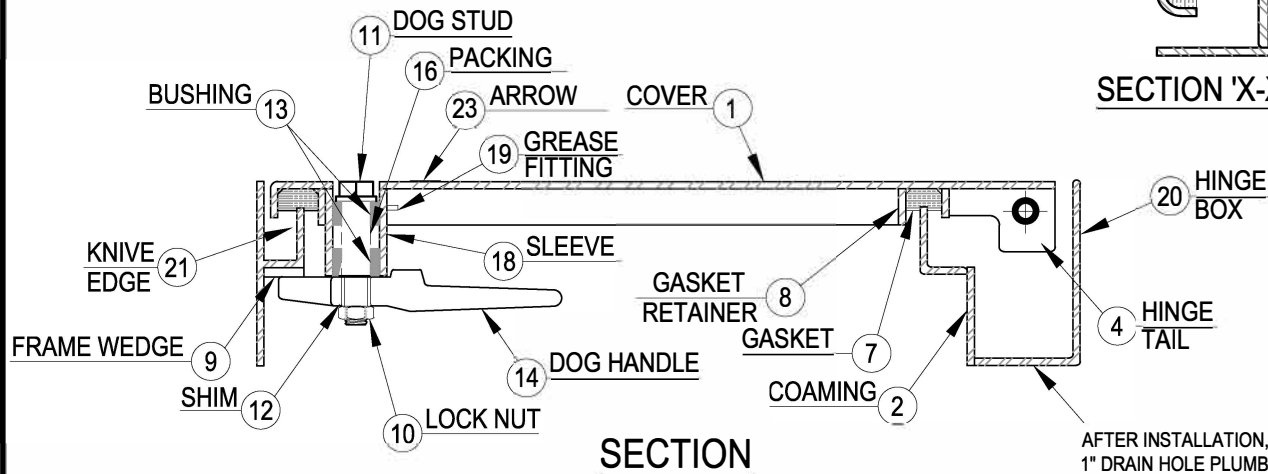

**NOTES:**  
 1. AFTER INTALLATION, A 1" DIAMETER DRAIN HOLE MUST BE INSTALLED AT THE LOW POINT IN THE HINGE BOX AND DRAINED OVERBOARD OR TO A SUMP TO PREVENT CORROSION OR LEAKAGE. (BY OTHERS)

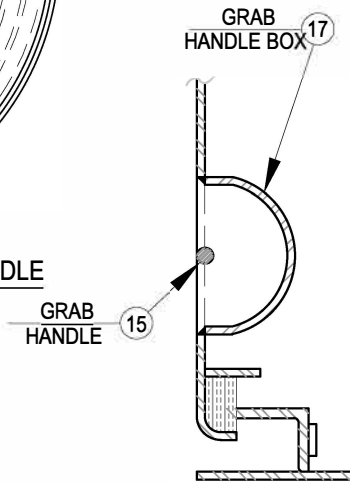

AFTER INSTALLATION, A 1" DRAIN HOLE PLUMBED OVERBOARD OR SUMP. (BY OTHERS)



**Turner Supply**  
 251-438-5581 or [contact@turnersupply.com](mailto:contact@turnersupply.com)  
**WATERTIGHT FLUSH OVAL HATCH**  
 DWG. NO.: 212-MS